


# Quick Install Guide


## Step 1:

Remove plastic tab to activate Key Fob

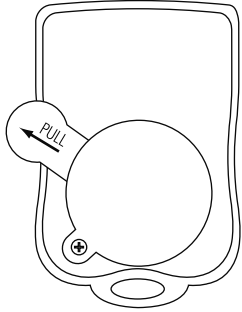




## Step 2:


Plug in the Sensor. The OBD-II port is located under the dash, most likely on driver side

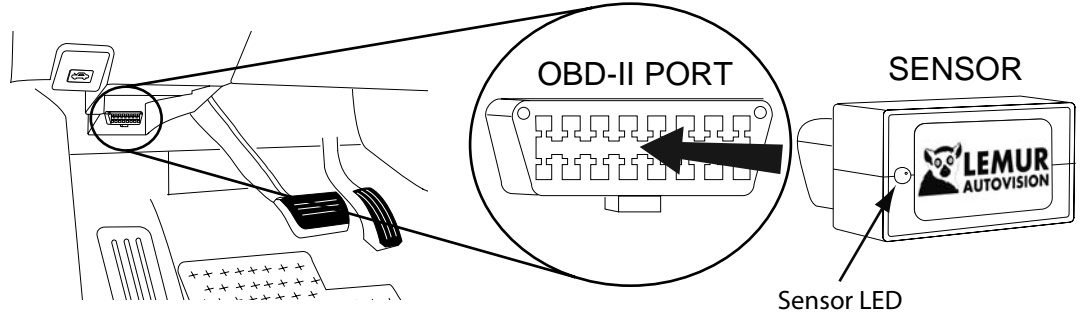




## Step 3:

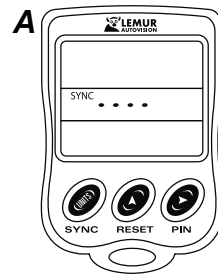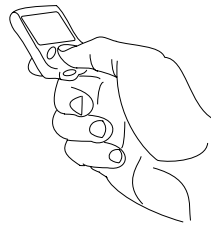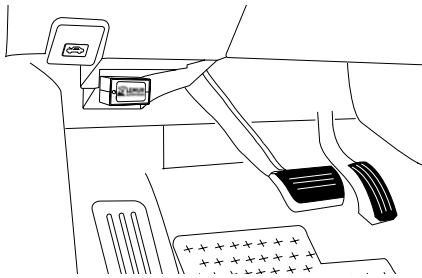
While Sensor LED is SOLID GREEN Synchronize the Key Fob and Sensor

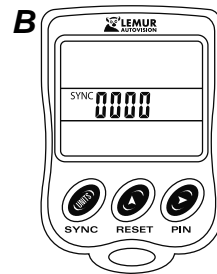

Press and Hold  to enter SYNC Mode




Enter 0000  to change digit  to select digit

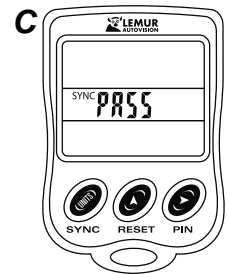

Successful if PASS Repeat **Step 3** if FAIL


## Step 4:


Start the vehicle. Within 2 minutes the Sensor LED will BLINK GREEN

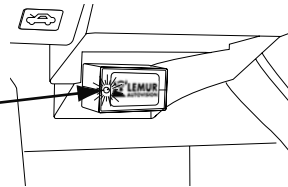




## Step 5:

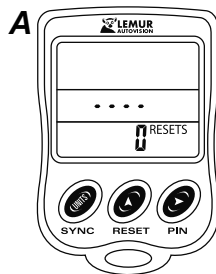
Reset the Key Fob

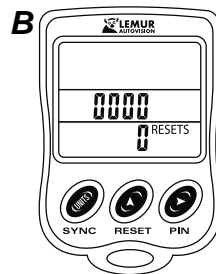

Press and Hold  to enter RESET Mode



Enter 0000  to change digit  to select digit

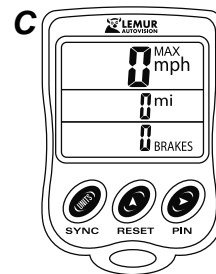

Statistics reset to Zero

**You have successfully installed your Lemur Autovision™.**